



EUROSEALER™

RESEAL & SAVE

Finally, an inexpensive way to perfectly reseal unused portions of food & other items. The amazing EUROSEALER™ creates an airtight seal that locks in freshness & keeps you organized.



HOW TO USE:

1. Place item in bag.
2. Use sealer to make a new seam so contents are completely encased.
Uses 2 AA Alkaline Batteries (NOT INCLUDED)
3. Use convenient bag opener to, neatly, reopen bag when you are ready to use.



SAVE ON...

- SPOILED FOOD
- LOST ITEMS
- COST OF STORAGE BAGS



**EVEN SEALS
A BAG
FULL OF WATER!**