

PERSONAL FIREPLACE HEATER™



Owner's Manual

Save These Instructions - For Household Use Only

Guarantee Information Inside

When using electrical appliances, basic safety precautions should always be followed. Do not use the **Personal Fireplace Heater™** until you have read this manual thoroughly.

Visit **TristarCares.com** for tutorial videos, product details, and more.



IMPORTANT INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before using this heater.
2. This heater is **HOT** when in use. To **AVOID BURNS**, do not let bare skin touch hot surfaces. Use the handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meter) from the front of the heater and keep them away from the sides and rear.
3. **EXTREME CAUTION** is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. **ALWAYS** unplug heater when not in use.
5. **DO NOT** operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or has been damaged in any manner. Discard the heater or return it to an authorized service facility for examination and/or repair.
6. **DO NOT** use outdoors.
7. This heater is **NOT INTENDED** for use in bathrooms, laundry areas, and similar indoor locations. **NEVER** place the heater where it may fall into a bathtub or other water container.
8. **DO NOT** run the power cord under carpeting. **DO NOT** cover the power cord with throw rugs, runners, or similar coverings. **DO NOT** route the power cord under furniture or appliances. Arrange the power cord away from traffic areas and where it will not be tripped over.
9. To disconnect the heater, turn the Power Switch to off and then remove the plug from the power outlet.
10. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening because this might cause an electric shock, fire, or damage to the heater.
11. **TO PREVENT A POSSIBLE FIRE**, do not block the air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. **DO NOT** use it in areas where gasoline, paint, or flammable liquids are used or stored.
13. Use this heater **ONLY** as described in this manual. Any other use not recommended by Tristar may cause fire, electric shock, or injury to people.
14. **ALWAYS** plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
15. The heater **MUST NOT** be placed within 3 feet (0.9 meter) of a power outlet.
16. This heater is **NOT INTENDED** for use by people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they are under the supervision of a responsible person or have been given proper instruction in using the heater. This heater is not intended for use by children.

IMPORTANT INSTRUCTIONS

17. **DO NOT** connect the power cord to an on/off device, such as a timer. **DO NOT** connect the heater to a circuit that is regularly switched on and off.
18. If the power supply cord is damaged, it **MUST BE** replaced by Tristar, its service agent, or a similarly qualified person.
19. **DO NOT** use outdoors.
20. **CUT OFF** the power immediately if there is a short circuit or damage to the Unit or power cord.
21. **UNPLUG** the heater when not in use.
22. Due to risk of melting the power cord, **DO NOT** place the power cord in front of the heater.
23. This heater is **NOT RECOMMENDED** for use on multi-use carpets or high-pile carpets. Only operate the heater on a flat, stable surface.
24. **DISPOSE** of the packaging carefully. Plastic packaging may cause environmental pollution.
25. **ONLY** plug the power cord into a 100–120V power outlet.
26. This heater is fitted with a thermostatic room temperature control.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY



WARNING:

For California Residents

This product can expose you to Bisphenol A, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.




CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
NO USER-SERVICEABLE PARTS INSIDE



Model	Voltage	Frequency	Power
-------	---------	-----------	-------

YH-28	AC 100–120V	60Hz	400W
-------	-------------	------	------

Parts & Accessories

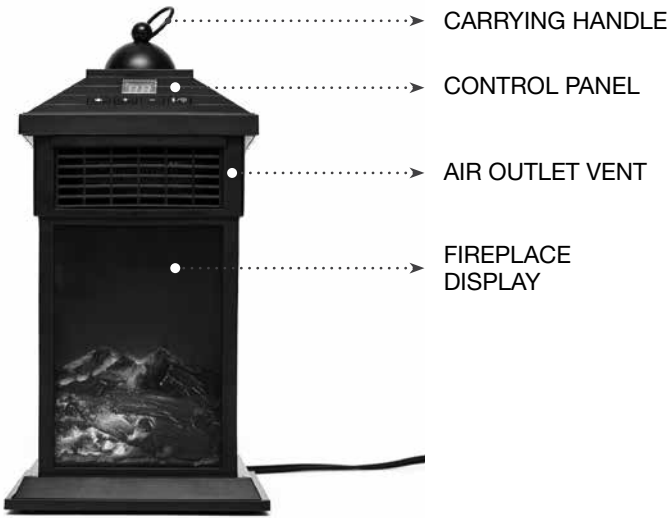

Remote Control
(2 AAA Batteries)



Control Panel



Power Switch (Back)



Air Inlet Vent (Back)

Controls



Power Switch: Press "I" to power on the Unit. Press "O" to power off the Unit. When the Unit is powered on but not activated, the Display shows "OF."



Remote Power Button: Press once to activate the Unit. Press again to deactivate the Unit. Note: The Remote Control will not function unless the Power Switch is in the ON position.



Temperature/Timer Display Button: Press to cycle between the ambient temperature, the temperature setting, and the timer setting. The temperature and timer settings will blink for 3 seconds before reverting to the ambient temperature display.



Time/Temperature Increase Button: Press to increase the set time or temperature.



Time/Temperature Decrease Button: Press to decrease the set time or temperature.



Fireplace Effect Button: Press to display or hide the visual fireplace effect. Note: The fireplace effect can be used both with and without the Unit's heating function.

Operating Instructions

1. Place the Unit on a flat, stable surface. Plug the Power Cord into a power outlet.
2. Press “I” on the Power Switch (located at the lower back corner on the Unit) to power the Unit on. Then, press the Remote Power Button.
3. Set the desired temperature: Use the Temperature/Timer Display Button to cycle to the temperature setting. Then, use the Time/Temperature Increase or Decrease Buttons to select your desired temperature.

NOTE: To enable the Unit’s heating function, set the Unit’s temperature above the ambient temperature. The Unit will start heating up and blowing hot air. After the desired temperature is set, the display reverts to showing the ambient temperature.

4. Set the timer: If you are using the Unit’s timer function, use the Temperature/Timer Display Button to cycle to the timer setting. Use the Time/Temperature Increase or Decrease Buttons to set the timer.

NOTE: The Unit will continue to operate if the timer is set to 0. Manually turn the Unit off when it is not in use.

5. Press the Fireplace Effect Button to display or hide the visual fireplace effect.

Additional Information

- Temperature setting range: 59–95° F.
- Timer setting range: 0–8 hours. By default, the timer displays “OH,” which indicates that the timer is inactive. The timer can be increased or decreased in 1-hour increments.
- During use, the Unit may turn on or off depending on the difference between the ambient temperature and set temperature. When the ambient temperature rises above the set temperature, the Unit will automatically stop heating (the fan continues blowing for 15 seconds before stopping completely). When the ambient temperature falls below the set temperature, the Unit will automatically start heating and blowing hot air again.
- If the Remote Power Button is used to deactivate the Unit while the Unit is heating and blowing hot air, the fan will continue to blow for 15 seconds before stopping completely. The Display will show a 15-second countdown until the fan has powered off. The Unit will still be on but will not produce heat.
- If the Unit Power Switch is used to turn off the Unit, the fan will stop blowing immediately.

Parts & Accessories

Overheating Safety Device

The Unit is fitted with a safety device that switches off the heater in the event of overheating. If the Unit stops working, turn the Unit off using the Power Switch, allow the Unit to cool, and inspect the vents for blockage. Disconnect the Power Cord from the power outlet and wait at least 10 minutes for the protection system to reset before attempting to restart the Unit. If the Unit still does not turn on, make sure that the power cord has been disconnected for at least 10 minutes. If the Unit still does not work, contact Customer Service.

NOTE: If you do not plan to use the Unit for an extended period, disconnect the Power Cord from the power outlet.

Tip-Over Safety Switch

To protect your safety, your heater is fitted with a tip-over safety switch that cuts off power to the heating element when the Unit is lifted up or tipped over. If this happens, the fan continues blowing and the Fireplace Effect light remains on. When the Unit is returned to a stable, level surface, power is restored to the heating element.

Cleaning

1. Disconnect the Power Cord from the power outlet.
2. Wipe the outside of the Unit with a dry or damp cloth. Do not use petroleum, detergents, or chemical solvents to clean the heater.

Storage

When the Unit is not in use for a long time, it should be protected from dust and stored in a dry, clean place.

After an extended storage period, clean any dust from the Unit before use.



60-Day Money-Back Guarantee

If you decide that you don't love this product, your order is covered by our 60-Day Money-Back Guarantee. You have 60 days from the day you receive your product to request a replacement product or refund of the purchase price minus processing and handling fees.

To receive a refund or replacement, you must return the product to us at your expense. To return the product, call customer service at 1-973-287-5135 and request a return merchandise authorization number. Pack the product carefully and include in the package a note with (1) your name, (2) mailing address, (3) phone number, (4) email address, (5) reason for return, and (6) proof of purchase or order number, and (7) specify on the note whether you are requesting a refund or replacement. Write the return merchandise authorization number on the outside of the package.

Send the product to the following return address:

Personal Fireplace Heater
Tristar Products
500 Returns Road,
Wallingford, CT 06495

The logo features a stylized flame icon on the left, followed by the text "PERSONAL FIREPLACE HEATER" in a bold, italicized, sans-serif font. A small trademark symbol (TM) is located at the end of the word "HEATER".

**PERSONAL
FIREPLACE
HEATER™**

We are very proud of the design and quality
of our **Personal Fireplace Heater™**.

This product has been manufactured to the highest standards.
Should you have any questions, our friendly customer service staff
is here to help you.

Visit us at www.TristarCares.com for information
about this product and how-to videos.
Or you may call us at **973-287-5135**



Distributed by:
Tristar Products, Inc.
Fairfield, NJ 07004
© 2019 Tristar Products, Inc.
Made in China
PFH_IB_TP_ENG_V2_190410

