

## STEP 1



Slide the Release Switch to the Open position. Release the Switch and twist the Lid clockwise. When the Lid Position Mark is aligned with the Open Mark, lift the Lid to remove.

## STEP 2



Place the Inner Pot inside the Power Quick Pot Base.

## STEP 3



Add your ingredients. Do not fill past the FULL line in the Inner Pot.

## STEP 4



Place the Lid on top of the Base, aligning the Lid Position Mark with the Open Mark. Twist the Lid counterclockwise about 30°. When the Lid is locked, the Release Switch will automatically move to the Closed position.

## STEP 5



Select a cooking preset button on the sides of the Digital Display. Use the Center Dial to select a food type. Press the Center Dial to confirm the cooking time and temperature settings and start the cooking process.

Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).