

# Quick Start Guide

# PowerXL™

products that excel

## CLASSIC AIR FRYER

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

### STEP 1



#### Remove Basket

Pull the Basket straight out.

### STEP 2



#### Load Basket

Place the Fry Tray in the Basket and push down until the Fry Tray clicks into place. Arrange the food you are cooking on top of the Fry Tray.

### STEP 3



#### Return Basket to Unit

Push the Basket straight in until it clicks.

### STEP 4



#### Power Unit On

Set the time and temperature. Follow instructions specific to your recipe.

### STEP 5



#### Remove Basket

Set the Basket on a secure, heat-resistant surface. Use tongs to remove food.